


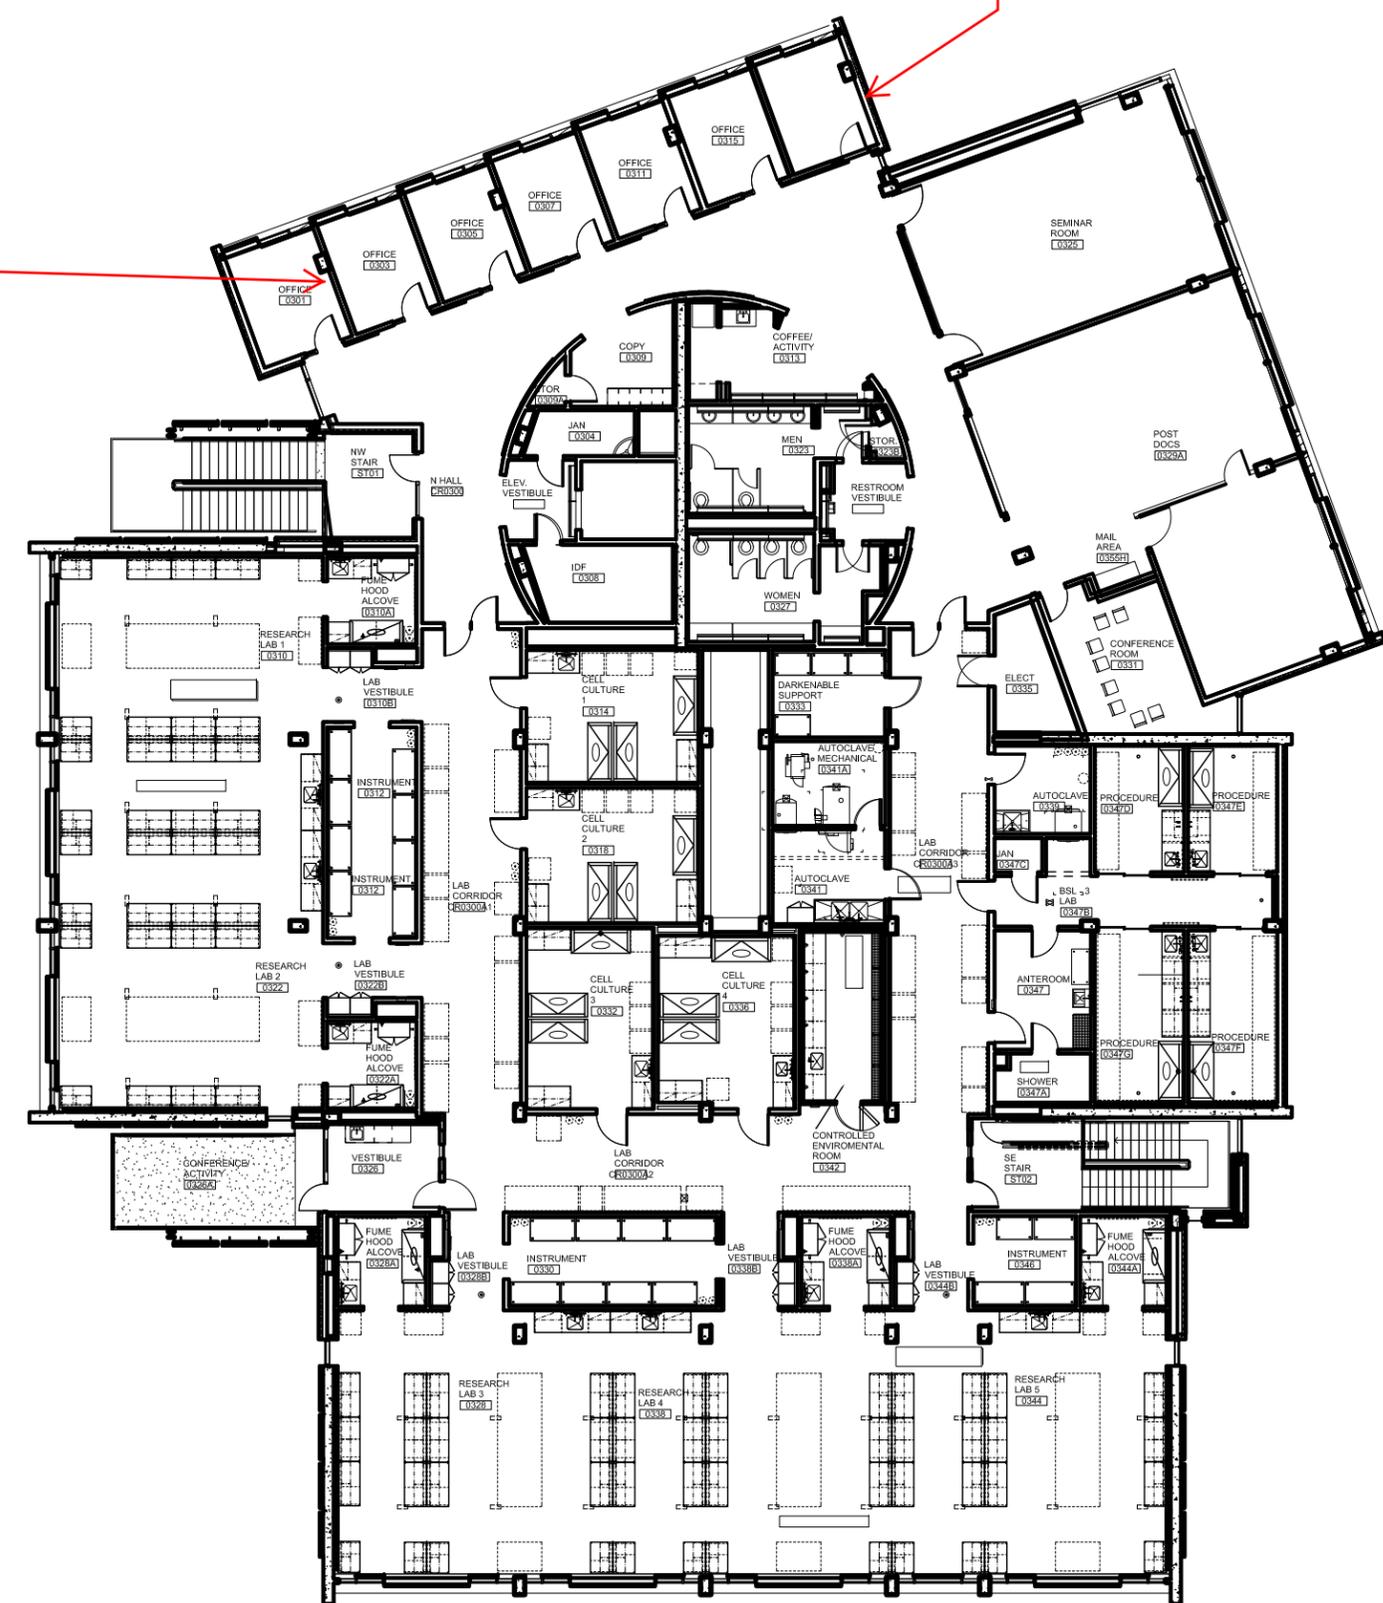

(E) location of wall  
mount and TV,  
remove and  
relocate. Patch and  
paint wall.

Relocate TV and wall mount here.  
Match (E) installation height. Add  
power behind TV.



CAAN #: P5406

DRAWN BY:  
AB

PROJECT NO:  
N/A

DATE:  
06/06/19

BUILDING NAME:  
SOM RESEARCH

LEVEL:  
THIRD FLOOR

SHEET NO:  
02

SCALE : N.T.S

DRAWING FILE:  
X-P5406-03.DWG